

Globe valve, 2-way, Flange, PN 25

- For closed (high temperature) hot water and steam systems in the noncritical range
- For modulating control of airhandling and heating systems on the water side



Type overview

Туре	DN []	kvs [m³/h]	Stroke	PN []	Sv min.	
H6015XP4-S2	15	0.4	15 mm	25	50	
H6015XP63-S2	15	0.63	15 mm	25	50	
H6015X1-S2	15	1	15 mm	25	50	
H6015X1P6-S2	15	1.6	15 mm	25	50	
H6015X2P5-S2	15	2.5	15 mm	25	50	
H6015X4-S2	15	4	15 mm	25	50	
H6020X4-S2	20	4	15 mm	25	100	
H6020X6P3-S2	20	6.3	15 mm	25	100	
H6025X6P3-S2	25	6.3	15 mm	25	100	
H6025X10-S2	25	10	15 mm	25	100	
H6032X10-S2	32	10	15 mm	25	100	
H6032X16-S2	32	16	15 mm	25	100	
H6040X16-S2	40	16	15 mm	25	100	
H6040X25-S2	40	25	15 mm	25	100	
H6050X25-S2	50	25	15 mm	25	100	
H6050X40-S2	50	40	15 mm	25	100	

Technical data

Fun	ction	nal	data
ı uıı	CLIUI	ıaı	uala

Fluid	Hot water and steam (Δp/P1 <0.4), water with max. 50% volume of glycol
Fluid temperature	5150°C
Fluid temperature note	120°C up to 2500 kPa 150°C up to 2430 kPa
Permissible operating pressure ps	2500 kPa
Flow characteristic	equal percentage (VDI/VDE 2173) n(gl) = 3, optimised in the opening range
Leakage rate	max. 0.05% of the kvs value
Closing point	Bottom (▼)
Pipe connectors	Flange PN 25 according to ISO 7005-2
Installation position	upright to horizontal (in relation to the stem)
Servicing	maintenance-free
Housing	EN-GJS-400-18-LT (GGG 40.3), with protective paint
Closing element	Stainless steel
Stem	Stainless steel
Stem seal	PTFE V-ring
Seat	Stainless steel

Materials



Safety notes



- The valve has been designed for use in stationary heating, ventilation and airconditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The valve does not contain any parts that can be replaced or repaired by the user.
- The valve may not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When determining the flow rate characteristic of controlled devices, the recognised directives must be observed.

Product features

Mode of operation

The globe valve is adjusted by a globe valve actuator. The actuators are connected by a commercially available modulating or 3-point control system and move the valve cone, which acts as a throttling device, into the opening position dictated by the positioning signal.


Flow characteristic

An equal percentage flow characteristic is produced by the profile of the valve cone.

Installation notes

Recommended installation positions

The globe valve may be mounted upright to horizontal. It is not permissible to mount the globe valves with the spindle pointing downwards.

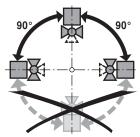

Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to. Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

Servicing


Globe valves and globe valve actuators are maintenance-free.

Before any service work on the final controlling device is carried out, it is essential to isolate the globe valve actuator from the power supply (by unplugging the electrical cables if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the globe valve and the globe valve actuator have been reassembled correctly in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction


The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the valve could become damaged.

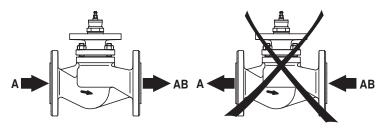



Dimensions / Weight

Dimensional drawings

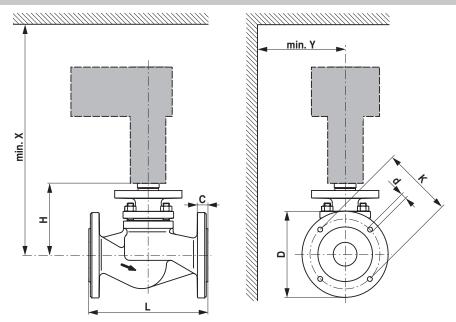

X/Y: Minimum distance with respect to the valve centre.

The actuator dimensions can be found on the respective actuator data sheet.

Туре	DN	L	н	С	D	d	K	X	Υ	Weight
	[]	[mm]	[mm]	[mm]	[mm]	· ·				
H6015XP4-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6015XP63-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6015X1-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6015X1P6-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6015X2P5-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6015X4-S2	15	130	118	16	95	4 x 14	65	370	100	3.9 kg
H6020X4-S2	20	150	118	18	105	4 x 14	75	370	100	4.9 kg
H6020X6P3-S2	20	150	118	18	105	4 x 14	75	370	100	4.9 kg
H6025X6P3-S2	25	160	126	18	115	4 x 14	85	380	100	6.0 kg
H6025X10-S2	25	160	126	18	115	4 x 14	85	380	100	6.0 kg
H6032X10-S2	32	180	126	18	140	4 x 18	100	380	100	7.5 kg
H6032X16-S2	32	180	126	18	140	4 x 18	100	380	100	7.5 kg
H6040X16-S2	40	200	133	18	150	4 x 18	110	390	100	9.3 kg
H6040X25-S2	40	200	133	18	150	4 x 18	110	390	100	9.3 kg
H6050X25-S2	50	230	139	20	165	4 x 18	125	390	100	12 kg
H6050X40-S2	50	230	139	20	165	4 x 18	125	390	100	12 kg

Further documentation

- The complete product range for water applications
- Data sheets for globe valve actuators
- Installation instructions for valves and/or globe valve actuators
- Notes for project planning 2-way and 3-way globe valves