

Globe valve, 2-way, External thread

- For open and closed cold and warm water systems
- For modulating control of air-handling and heating systems on the water side


Type overview

Type	DN []	G ["]	kvs [m³/h]	Stroke []	PN []	Sv min. []
H411B	15	1 1/8	0.63	15 mm	16	50
H412B	15	1 1/8	1	15 mm	16	50
H413B	15	1 1/8	1.6	15 mm	16	50
H414B	15	1 1/8	2.5	15 mm	16	50
H415B	15	1 1/8	4	15 mm	16	50
H420B	20	1 1/4	6.3	15 mm	16	100
H425B	25	1 1/2	10	15 mm	16	100
H432B	32	2	16	15 mm	16	100
H440B	40	2 1/4	25	15 mm	16	100
H450B	50	2 3/4	40	15 mm	16	100

Technical data

Functional data	Fluid	Cold and warm water, water with glycol up to max. 50% vol.
Fluid temperature		5...120 °C
Fluid temperature note		-10 °C with stem heating
Permissible operating pressure ps		1600 kPa
Flow characteristic		equal percentage (VDI/VDE 2173) n(gl) = 3, optimised in the opening range
Leakage rate		max. 0.05% of the kvs value
Closing point		Top (▲)
Pipe connectors		External thread according to ISO 228-1
Installation position		upright to horizontal (in relation to the stem)
Servicing		maintenance-free
Materials		
Housing		Red cast brass Rg5
Closing element		Stainless steel
Stem		Stainless steel
Stem seal		EPDM O-ring
Seat		Red cast brass Rg5 / Niro (Bypass)

Safety notes


- The valve has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The valve does not contain any parts that can be replaced or repaired by the user.
- The valve may not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When determining the flow rate characteristic of controlled devices, the recognised directives must be observed.

Product features


- Mode of operation** The globe valve is adjusted by a globe valve actuator. The actuators are connected by a commercially available modulating or 3-point control system and move the valve cone, which acts as a throttling device, into the opening position dictated by the positioning signal.
- Flow characteristic** An equal percentage flow characteristic is produced by the profile of the valve cone.

Accessories


	Description	Type
Electrical accessories	Stem heating DN 15...50 (45 W)	ZH24-1
Mechanical accessories	Pipe connector for globe valve with external thread DN 15 Rp 1/2"	ZH4515
	Pipe connector for globe valve with external thread DN 20 Rp 3/4"	ZH4520
	Pipe connector for globe valve with external thread DN 25 Rp 1"	ZH4525
	Pipe connector for globe valve with external thread DN 32 Rp 1 1/4"	ZH4532
	Pipe connector for globe valve with external thread DN 40 Rp 1 1/2"	ZH4540
	Pipe connector for globe valve with external thread DN 50 Rp 2"	ZH4550

Installation notes

- Recommended installation positions** The globe valve may be mounted upright to horizontal. It is not permissible to mount the globe valves with the spindle pointing downwards.

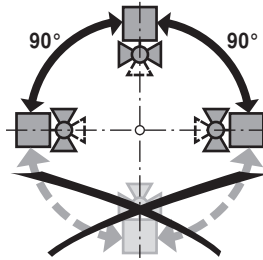


- Water quality requirements** The water quality requirements specified in VDI 2035 must be adhered to. Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.
- Servicing** Globe valves and globe valve actuators are maintenance-free. Before any service work on the final controlling device is carried out, it is essential to isolate the globe valve actuator from the power supply (by unplugging the electrical cables if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level). The system must not be returned to service until the globe valve and the globe valve actuator have been reassembled correctly in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.
- Flow direction** The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the valve could become damaged.

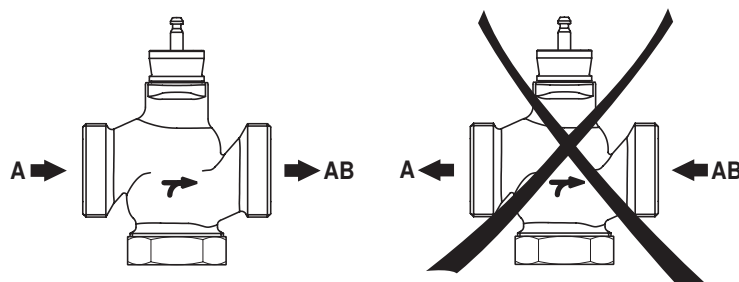

Dimensions / Weight

Dimensional drawings

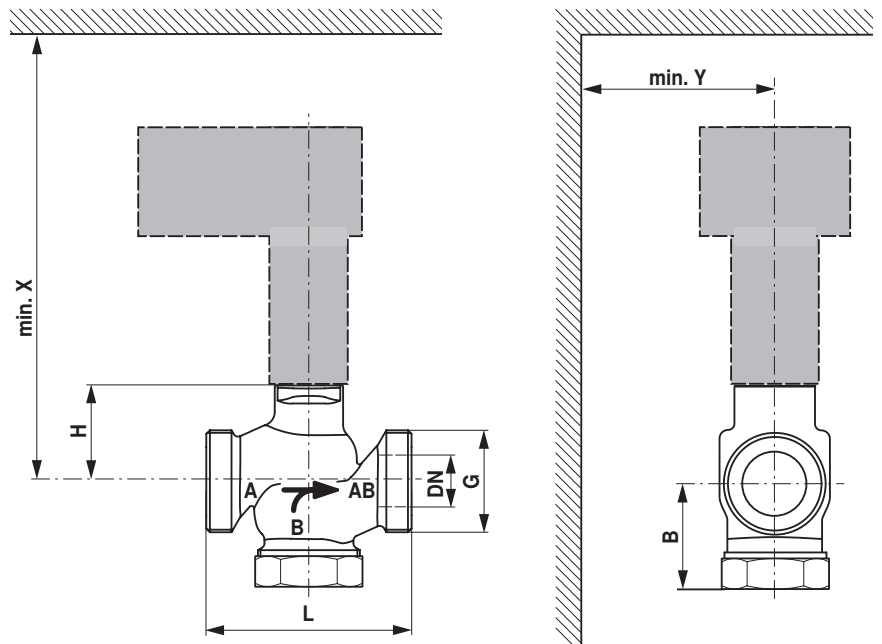

X/Y: Minimum distance with respect to the valve centre.
The actuator dimensions can be found on the respective actuator data sheet.

Type	DN []	G ["]	L [mm]	B [mm]	H [mm]	X [mm]	Y [mm]	Weight
H411B	15	1 1/8	80	65	46	290	100	1.3 kg
H412B	15	1 1/8	80	65	46	290	100	1.3 kg
H413B	15	1 1/8	80	65	46	290	100	1.9 kg
H414B	15	1 1/8	80	65	46	290	100	1.9 kg
H415B	15	1 1/8	80	65	46	290	100	1.9 kg
H420B	20	1 1/4	90	65	46	290	100	2.1 kg
H425B	25	1 1/2	110	66	52	300	100	2.3 kg
H432B	32	2	120	67	56	300	100	2.9 kg
H440B	40	2 1/4	130	72	65	310	100	3.5 kg
H450B	50	2 3/4	150	75	65	310	100	3.8 kg

Further documentation

- The complete product range for water applications
- Data sheets for globe valve actuators
- Installation instructions for valves and/or globe valve actuators
- Notes for project planning 2-way and 3-way globe valves